



F.R. WOOD
BLOCKING
AS REQUIRED

ATTACH WITH
PL URETHANE
CONSTRUCTION
ADHESIVE OR EQUAL.
COUNTERSUNK
SCREWS AS MINIMUM
NEEDED, FILL AND
EASE.

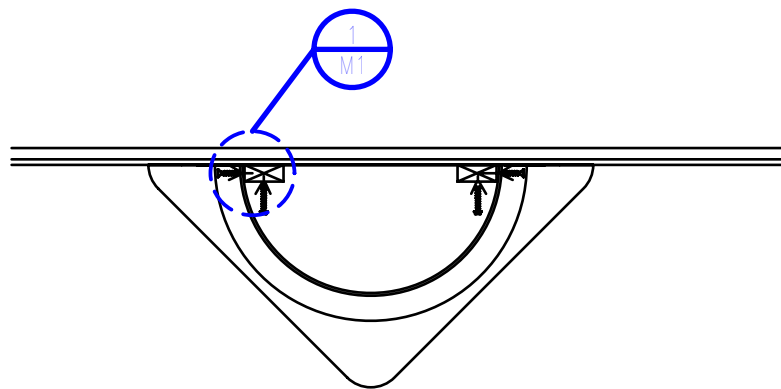


A SECTION VIEW
M1

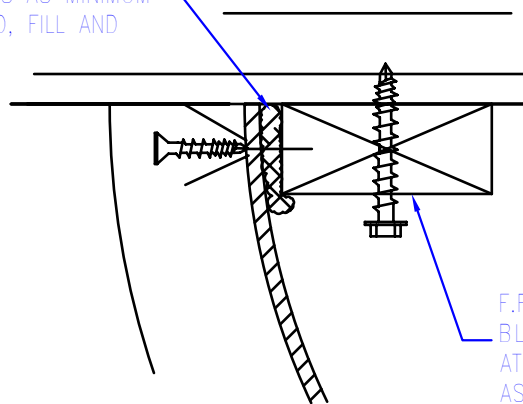

F.R. WOOD
BLOCKING
AT WALL
AS REQUIRED

1 ENLARGED DETAIL
M1

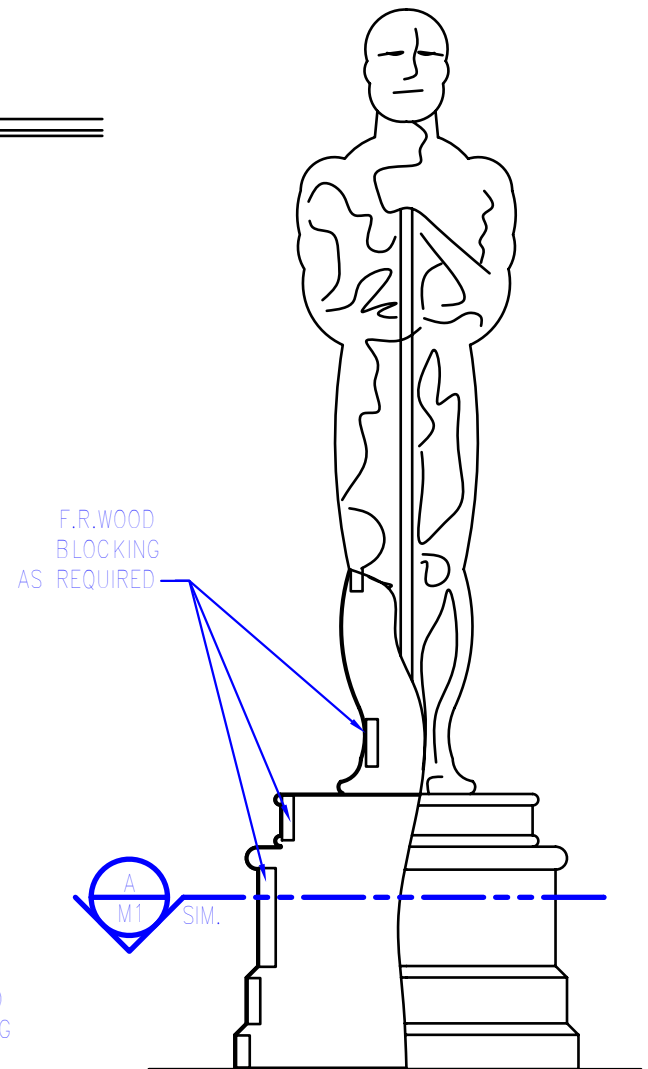

F.R. WOOD
BLOCKING
AS REQUIRED

A
M1
SIM.



Stromberg Architectural Products
4400 Oneal St, Greenville, TX. 75404 (903) 454-8682 FAX (903) 454-3642
www.strombergarchitectural.com

PROJECT:

COBB CINEMA

DATE:

BY:

LAST REVISION:

TITLE:

COLUMN AND STATUE MOUNTING REFERENCE

FILE NUMBER:

M1